

Energizer®


POWER INDICATOR LIGHT

Never get caught in the dark with the Energizer Power Indicator Flashlight! The easy-to-use power indicator display gives you comfort, confidence & flexibility as you know how much run time you have left AND can adjust the brightness to maximize the run time!


DIGITAL DISPLAY



RUNTIME INDICATOR

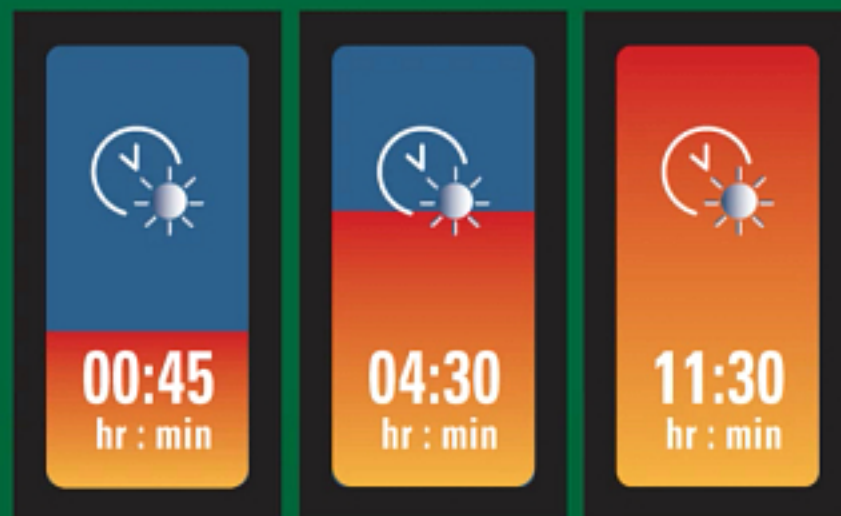

BATTERY POWER INDICATOR

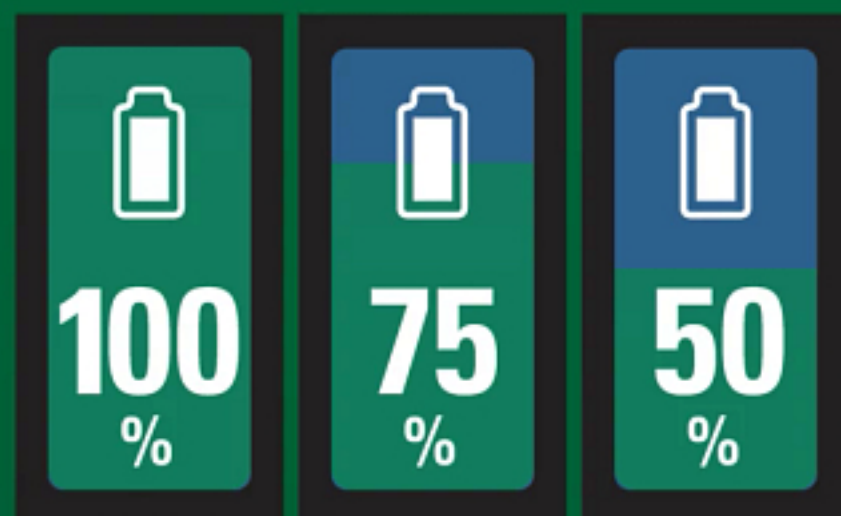

BATTERY CHARGE INDICATOR



OPERATING INSTRUCTIONS

HOW TO USE:

DIGITAL DISPLAY

- As soon as the power button is pressed, the digital display will turn on

RUNTIME INDICATOR

- The runtime indicator will appear first.
- This shows how many hours and minutes of runtime remain on the current mode selected.
- A lower mode may be selected to extend runtime.

Note: The runtime indicator is unavailable in emergency strobe mode.

BATTERY POWER INDICATOR

- The battery power indicator will appear ~5 seconds after runtime indicator appears on desired mode.
- This shows the battery percentage remaining.
- A lower mode may be selected to extend battery life.
- Both indicators will update as you click or half press through high, medium, and low modes.
- After both indicators have appeared on desired mode, the screen will go dark.

HOW TO USE MODES:

This light has a momentary switch meaning you can half press to change modes. If you full press, the light will turn off in between each mode.

USING HALF PRESS:

- Half Press 1 time to turn on/high mode.
- Half Press 2 times for medium mode
- Half press 3 times for low mode

Press down until button clicks to keep light on in desired mode.

USING FULL PRESS (light will turn off in between modes)

- Press 1 time to turn on/high mode.
- Press 3 times for medium mode
- Press 5 times for low mode

Press down until button clicks to keep light on in desired mode.

TO ACCESS THE EMERGENCY STROBE:

- Press button halfway down 2x very quickly, on the second continue to full press to keep strobe on.

Once the runtime has been met, the light will enter a dimmed mode. Display will indicate this with a dimmed orange screen displaying a low battery. Once battery is fully depleted the dimmed display will flash red every minute. Recharging is required

HOW TO CHARGE:

- Rechargeable battery is not user replaceable.
- To charge, use the USB cord (included) and plug into any USB charging port.
- Light may be used while charging, performance may vary.

BATTERY CHARGE INDICATOR:

While light is charging, digital display will show battery status. After 10 seconds the display will dim. The display will remain on (dimmed) for 15 minutes and then turn off. After display turns off, tap power button to show digital display again.

