


Energizer®

RECHARGEABLE
LANTERN

Never get caught in the dark with the **Energizer Digital Power Indicator Lantern!** The easy-to-use power indicator display gives consumers comfort, confidence & flexibility as they know how much run time they have left AND can adjust the brightness to maximize the run time!

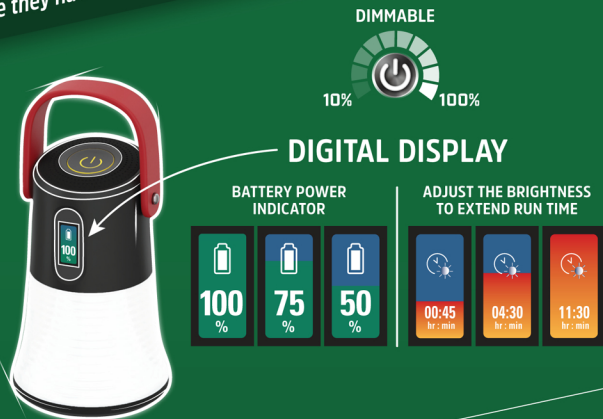

CHARGE WITH INCLUDED USB



HANGER HOOK



CABLE STORAGE



OPERATING INSTRUCTIONS

HOW TO USE:

- As soon as the power button is pressed, night light mode will turn on.
- Press again to turn on white area light.
- When white area light is on, press and hold longer than 2 seconds to increase or decrease brightness. Light will flash at brightest and dimmest. Release button to set light level.

DIGITAL DISPLAY

RUNTIME INDICATOR

- The runtime indicator will appear first.
- This shows how many hours and minutes of runtime remain on the current brightness level selected.
- A lower brightness may be selected to extend runtime.

BATTERY POWER INDICATOR

- The battery power indicator will appear ~5 seconds after the runtime indicator appears on desired brightness level.
- This shows the battery percentage remaining.
- A lower brightness may be selected to extend battery life.
- Both indicators will update as you press and hold to select brightness.
- After both indicators have appeared on desired brightness, the screen will go dark.
- Once the runtime has been met, the light will enter a dimmed mode. Display will indicate this with a dimmed orange screen displaying a low battery. Once battery is fully depleted the dimmed display will flash red every minute. Recharging is required.

HOW TO CHARGE:

- Rechargeable battery is not user replaceable.
- To charge use included USB cord and plug light into any USB charging port.
- Light may be used while charging, performance may vary.

BATTERY CHARGE INDICATOR

- Rechargeable Lantern display will show battery status. Press on/off button for 1 second to turn on display at any time to see battery charge status.

HANGER HOOK:

- Flip up attachment at the bottom allows for hanging from a hook overhead.

CABLE STORAGE:

- Twist flipped up attachment to the left to access cable storage.

